

## Replacing periodic maintenance parts

The periodic maintenance parts will need to be replaced regularly to maintain the print quality. The parts listed below will have to be replaced after printing approximately 50,000 pages for PF Kit MP and 100,000 pages for PF Kit1, PF Kit2, Fuser and Laser. When the following messages appear on the LCD please call Brother Customer Service **(in USA)** 1-877-BROTHER (1-877-276-8437) **(in Canada)** 1-877- BROTHER.

| LCD message                 | Description                            |
|-----------------------------|--|
| Replace Parts<br>PF Kit MP  | Replace paper feeding kit for MP tray. |
| Replace Parts<br>PF Kit 1   | Replace paper feeding kit for Tray 1.  |
| Replace Parts<br>PF Kit 2   | Replace paper feeding kit for Tray 2.  |
| Replace Parts<br>Fuser Unit | Replace fuser unit.                    |
| Replace Parts<br>Laser Unit | Replace laser unit.                    |

## Machine Information

### Checking the Serial Number

You can see the machine's Serial Number on the LCD.

- 1 Press **Menu, 6, 3**.

```
63.Serial No.
XXXXXXXXXX
```

- 2 Press **Stop/Exit**.

### Checking the Page Counters

You can see the machine's Page Counters for copies, printed pages and lists or a summary total.

- 1 Press **Menu, 6, 4**.

```
64.Page Counter
▲ Total      :XXXXXX
▼ List       :XXXXXX
```

- 2 Press **▲** or **▼** to see Total, List, Copy or Print.

```
64.Page Counter
▲ Copy       :XXXXXX
▼ Print      :XXXXXX
```

- 3 Press **Stop/Exit**.