


Frequency (Color Correction)

You can set how often the color correction (Color Calibration and Auto Registration) occurs. The default setting is Normal. The color correction process consumes some amount of the toner.

- 1 Press MENU.
- 2 Press ▲ or ▼ to display Printer.
Press Printer.
- 3 Press ▲ or ▼ to display Frequency.
Press Frequency.
- 4 Press Normal, Low or Off.
- 5 Press **Stop/Exit**.

Checking the Page Counters

You can see the machine's Page Counters for copies, printed pages, reports and lists, faxes or a summary total.

- 1 Press MENU.
- 2 Press ▲ or ▼ to display
Machine Info..
Press Machine Info..
- 3 Press Page Counter.
The LCD shows number of pages for
Total, Fax/List, Copy or Print.
- 4 Press Total, Fax/List, Copy or
Print to see the page counters for
Color and Black & White.
- 5 Do one of the following:
 - To see the other options, press .
 - To exit, press **Stop/Exit**.